

Beloader Pro HID Manager Instruction

please unzip this file first, otherwise can't download correctly

This HID Manager is new way to update and config the beloader Pro. The step is:

No.1 Step: Check if Hid manager can find beloader pro. If can't, it means you need upgrade the [Beloader Pro HID firmware](#) first with old way. If find, it means you already update Hid firmware before, so just config or update latest firmware directly.

- A: Hold update button and insert beloader pro into PC, use old way to update this [HID firmware](#).
- B: After update HID firmware successfully, unplug beloader pro, and insert into PC directly(don't hold update button), the light should turn into green.
- C: Unplug and enter update mode again(hold update button and insert PC), run the Hid Manager to update [latest firmware](#)
- D: Unplug beloader pro and enter update mode again, and use Hid Manager to config

You need update HID firmware first, and then use this Hid Manager to config or Update new firmware



